



AMERICAN WIRELESS ALARM, INC.

4450 Northgate Ct
Sarasota, FL 34234

DSC 9047/1832/9057

Away Mode:

When leaving your home, Push and Hold **Away**. This mode will arm the motion and give you a 60 second exit delay/30 second entry delay.

Stay Mode:

When staying home but you want the alarm to be on, Push and Hold **Stay**. This will turn off the motion but still give you a delay on your entry/exit doors.

Disarmed Mode:

Enter your **4 digit code**

Instant Mode:

When going to bed, Push and Hold **Stay** then ***9**. This will arm all doors instantly without arming your motion sensor. There is NO entry delay on instant mode.

Reset Alarm:

With your system disarmed, enter your **4 digit code** then your **4 digit code** a second time.

Change Master Code:

****Do Not Pause between numbers**** Enter ***5** then your **4 digit master code** (default = 1234) then **40** and your **new 4 digit code**. Press **#** to return to Ready

Change User Code(s):

****Do Not Pause between numbers**** Enter ***5** then your **4 digit master code** then the user number (**01-15**) and your **new 4 digit code**. Press **#** to return to Ready

Delete User Code(s)

Enter ***5** then your **4 digit master code** then the 2 digit user number (**01-15**) and *****. Press **#** to return to ready

Any Questions Call:
(800) 521-1511