



AMERICAN WIRELESS ALARM, INC.

4450 Northgate Ct
Sarasota, FL 34234

Ademco Vista 15P/20P

Away Mode:

When leaving your home, enter your **4 digit code** then **2** for **AWAY** (Quick Arm = **# 2**). This mode will arm the motion and give you a 60 second exit delay/45 second entry delay.

Stay Mode:

When staying home but you want the alarm to be on, enter your **4 digit code** then **3** for **STAY** (Quick Arm = **# 3**). This will turn off the motion but still give you a delay on your entry/exit doors.

Instant Mode:

When going to bed, enter your **4 digit code** then **7** for **INSTANT** (Quick Arm = **# 7**). This will arm all doors instantly without arming your motion sensor. There are NO entry delay on instant mode, exit delay will still apply.

Disarmed Mode:

Enter your **4 digit code** then **1** for **OFF**.

Reset Alarm:

Enter your **4 digit code** then **1** for **OFF** and your **4 digit code** then **1** for **OFF** a second time.

Change Master Code:

****Do Not Pause between numbers**** Enter your **4 digit master code** (default = 1234) then **802** and your **new 4 digit code** then your **new 4 digit code** a second time. If accepted, you will hear a beep.

Change User Code(s):

****Do Not Pause between numbers**** Enter your **4 digit master code** then **8** plus the user number (03-30) and your **new 4 digit code**. If accepted, you will hear a beep.

Any Questions Call:
(866) 823-5279